 


The instructions Of Cannon dozen dinosaurs

1 How to enter the Settings menu

Boot into the picture, after loading end, when the screen is blue, according to the prompt and press the "up" and "down", for example The following green picture:

 
If the timeout is not operation, the system automatically enter standby animation game, the next time you restart can enter setup menu.

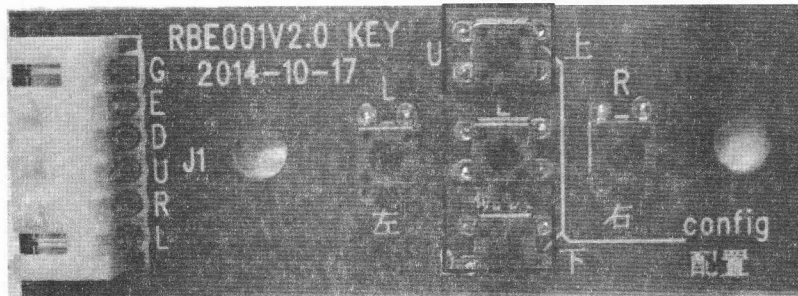

UP
O
O O O
O
DOWN

2 Setting menu


After entering the Settings menu, press the "up", "down", "left", "right" button move the cursor; Can set the following menu

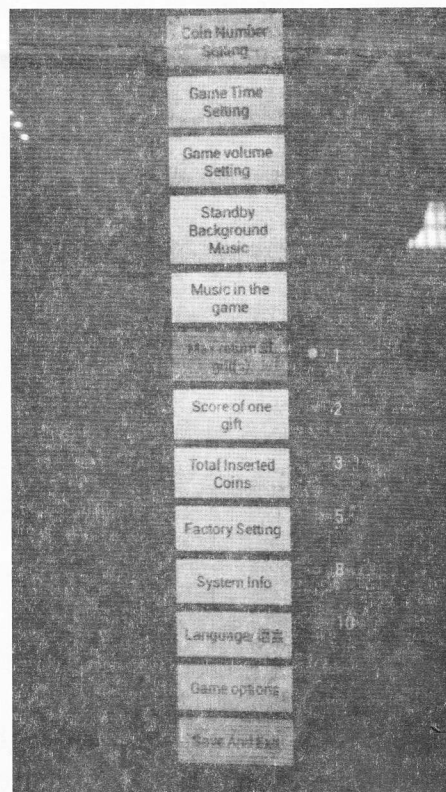

After the completion of the setting, move the cursor to the "exit" button, press the "ok" button to exit the Settings menu.

3 The game board interface definitions

 Note: 25 interface is backing down bead bead machine for motherboard frequency signal.

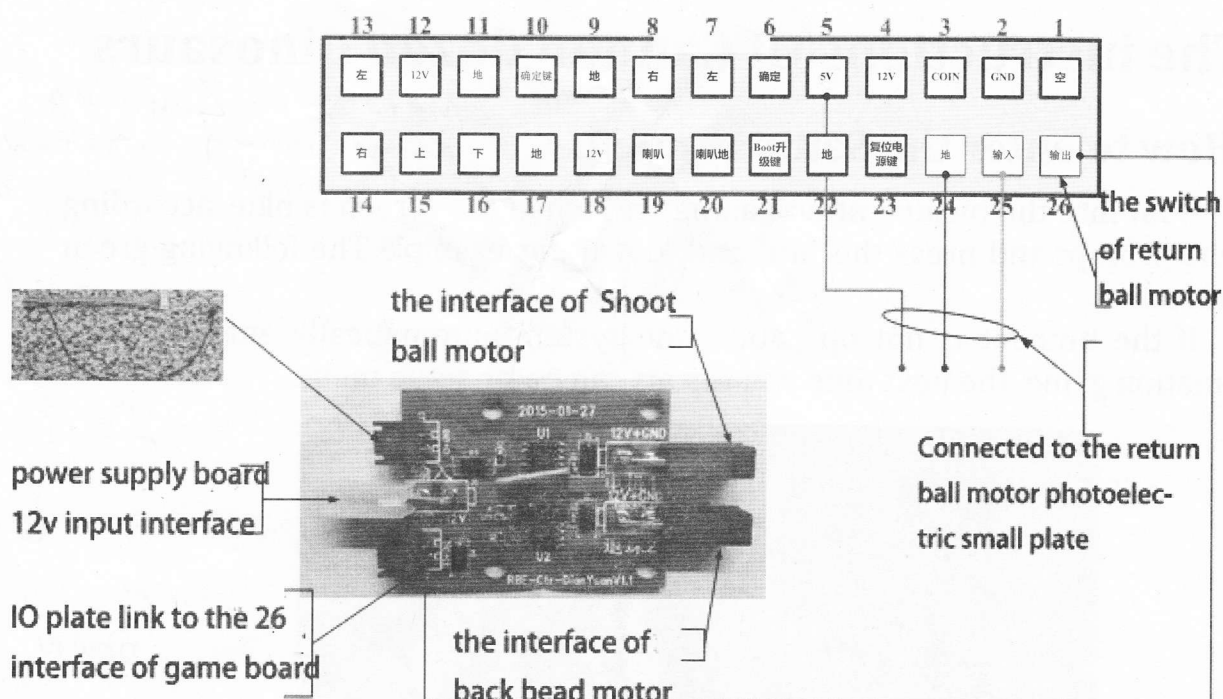

4 Fault detection

4.1 Can't shoot fish/it is no splash screen special effects in the game

1. Check the small board and main board game USB connection is loose, fault, if you need to replace the USB cable, ensure using USB with copper wire.
2. If step 1 is invalid, replace the small plate test.

4.2 Automatically insert the coins

Check whether coin toggle switch, whether move to the "NO" position, normal should be moved to the "NC" position.

4.3 Unable to insert coin.

Check whether the wiring between the game board and power board is loose.

4.4 Black screen

1. Check the screen power indicator is on
2. Change the screen test
3. Change the game board test

4.5 proportion of screen display incomplete

Change the screen to test.

4.6 Automatic restart the game board

Check for short circuit, 12 v peripherals such as lights, button lights, light board, etc. 12 v short circuit will cause the power plate protection, and then restart.

5 Other matters needing attention

1. After power electricity interval should be greater than 5 seconds
2. Connect the ground wire socket, especially when the game consoles and freezer, electric vehicle charging station Shared socket.
3. Avoid blowing rain, it is easy to damage the screen.